

LX-EP Series Installation Guide

Installation Information


1. Unit mounts on surface shown in Figure 1.
2. To maximize cable life, align transducer with moving element so that cable exits unit within 2° of vertical (with unit oriented as shown in Figure 1).
3. Use Table 1 to determine cable exit location relative to transducer mounting holes.
4. Mount unit with two #6 or smaller machine screws or two M3.5 or smaller metric machine screws.

Note

- a) Place a flat washer under the head of each screw.
- b) Torque 6-32 screws to **5 lb-in** maximum.
- c) Torque M3.5 screws to **0.56 N-m** maximum.

Specifications

Excitation Voltage..... 5.00 VDC \pm 0.25 VDC
 Excitation Current..... 30 mA max.
 Output 2 channel square wave in quadrature
 25 mA current sinking with internal 5.4K Ω
 pullup resistors (see schematic below)
 Connector Pins..... .025"x.025" on 0.100" centers
 Linearity..... \pm 0.10% of Full Scale
 Operating Temperature -25°C to +60°C

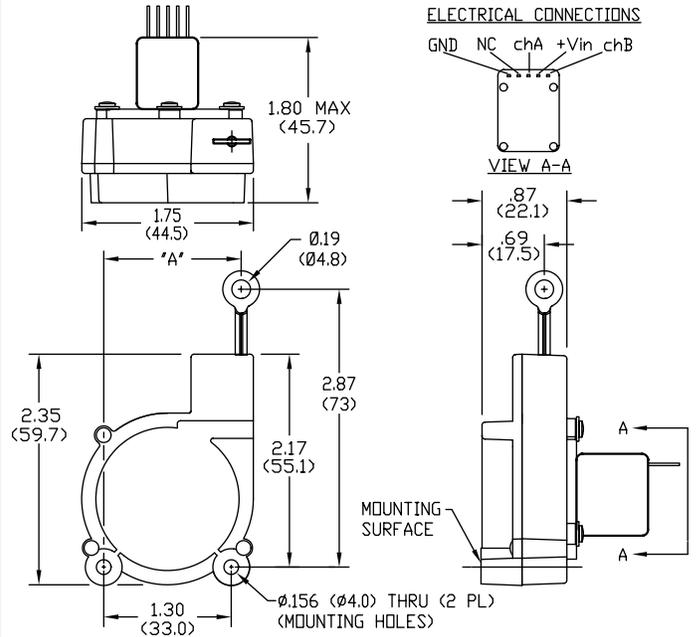

Dimensions in brackets are millimeters *Figure 1*


Table 1

Range	Dim "A"	
	(inch)	(mm)
10"	1.01	25.7
15", 30"	1.14	29.0
20", 40"	1.30	33.0
25", 50"	1.46	37.1

WAVEFORM



OUTPUT STAGE

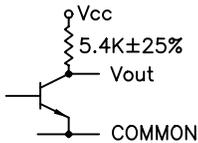

UniMeasure

4175 SW Research Way, Corvallis, Oregon, 97333
 •Tel: 541-757-3158 •Fax: 541-757-0858

Herbertek www.herbertek.se
 info@herbertek.se
 +46-18 590510